


## cast rock for slide steps

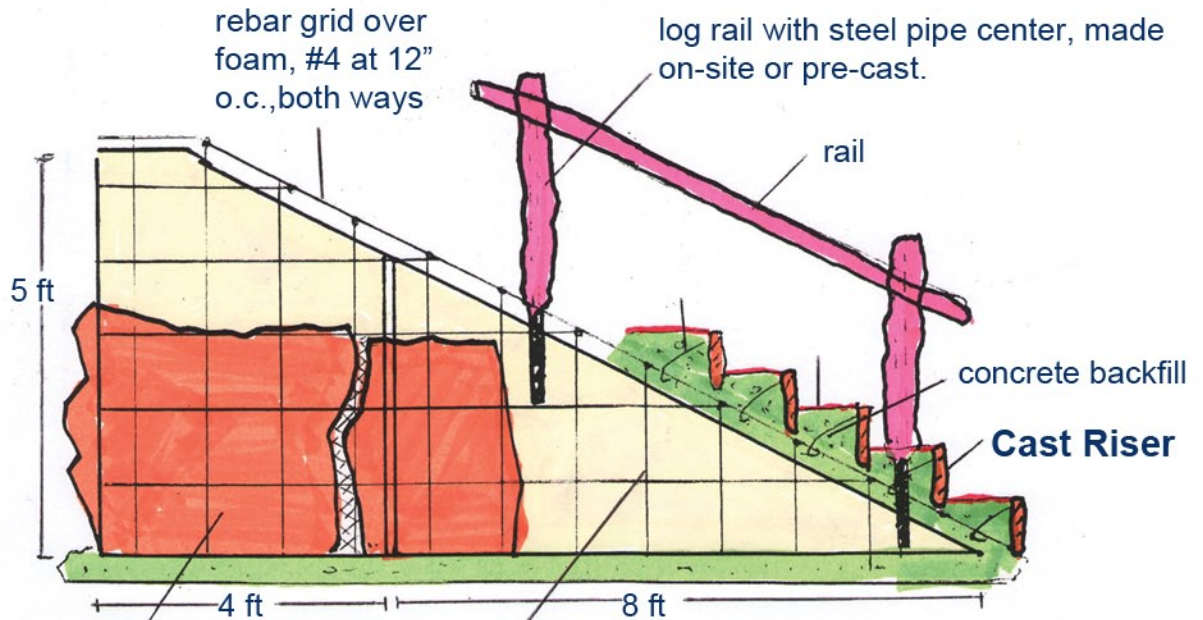

**RicoRock castings** are tied to the rebar grid and gaps are metal lathed. Backfill with concrete.

**Two foam blocks** cut at a 45 angle without rebar grid are included. The foam blocks can be cut with a tie wire "saw" to fit the space. Rebar grid should be anchored to a concrete pad or footings may be required by a local engineer. Note that the steps and rail may not meet local codes. Sample engineering is available.



1. set foam ramps. 2. rebar grid. 3. tie castings and Risers with wire inserts on back.



4. backfill with concrete  
5. hand texture gaps and treads  
6. color with RicoRock Acrylic Stains



Rails are recommended and posts can be placed in wet concrete or anchored later. Concrete posts with a wood grain are popular; RicoRock sells both pre-cast products or texture mats for hand texture.